


# 21. TROUBLESHOOTING

ENGINE DOES NOT START OR IS HARD TO START	21-1	POOR PERFORMANCE AT HIGH SPEED	21-4
ENGINE LACKS POWER	21-2	POOR HANDLING	21-4
POOR PERFORMANCE AT LOW AND IDLE SPEED	21-3		


## ENGINE DOES NOT START OR IS HARD TO START

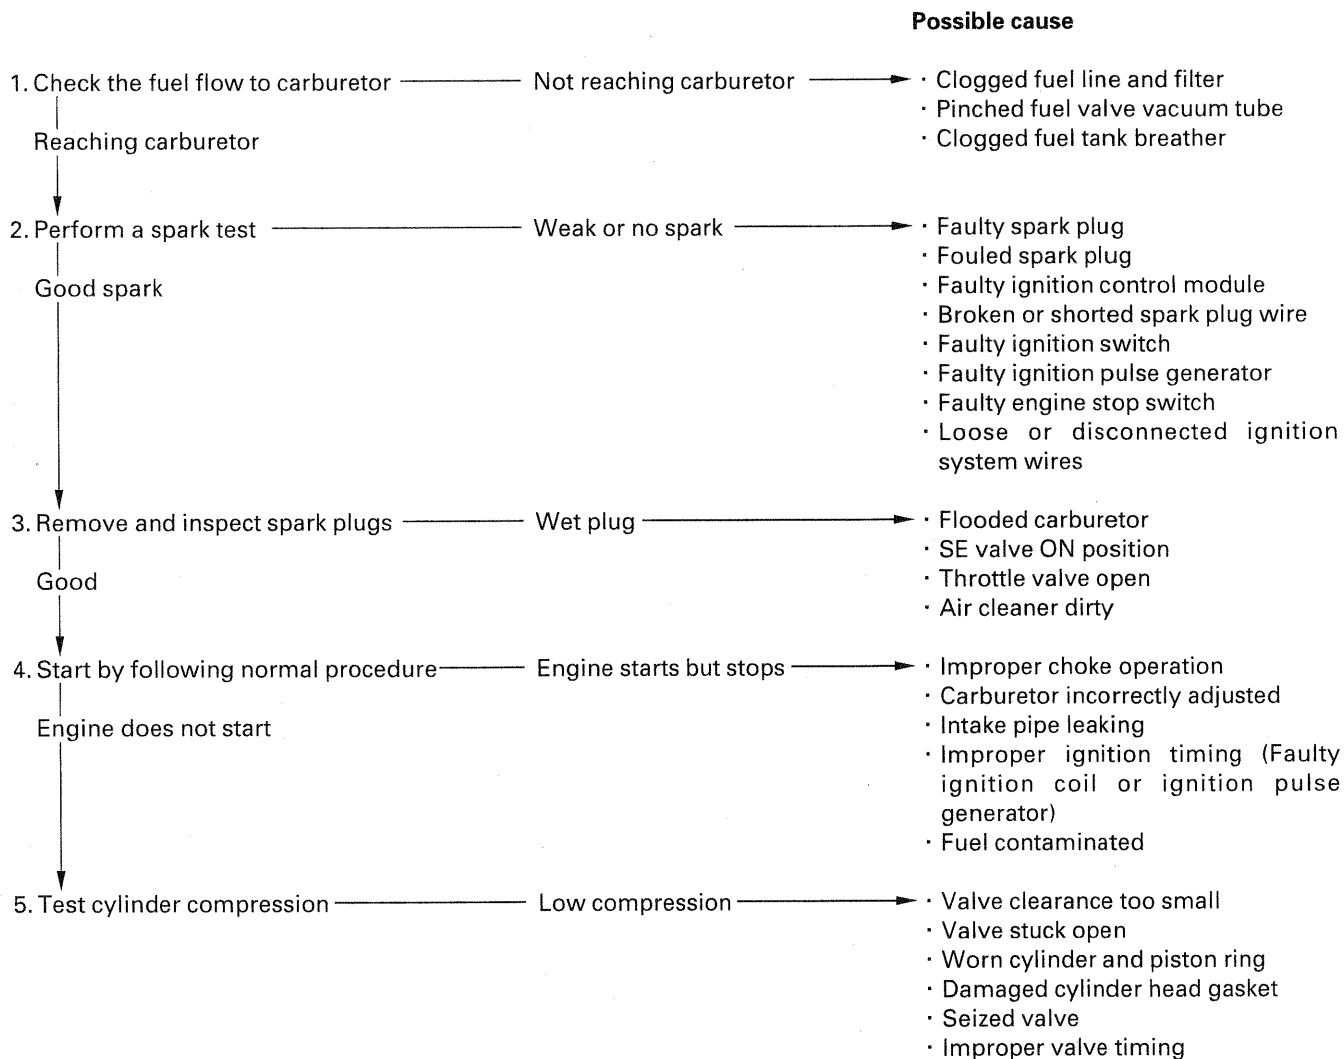


# TROUBLESHOOTING


## ENGINE LACKS POWER

### Possible cause

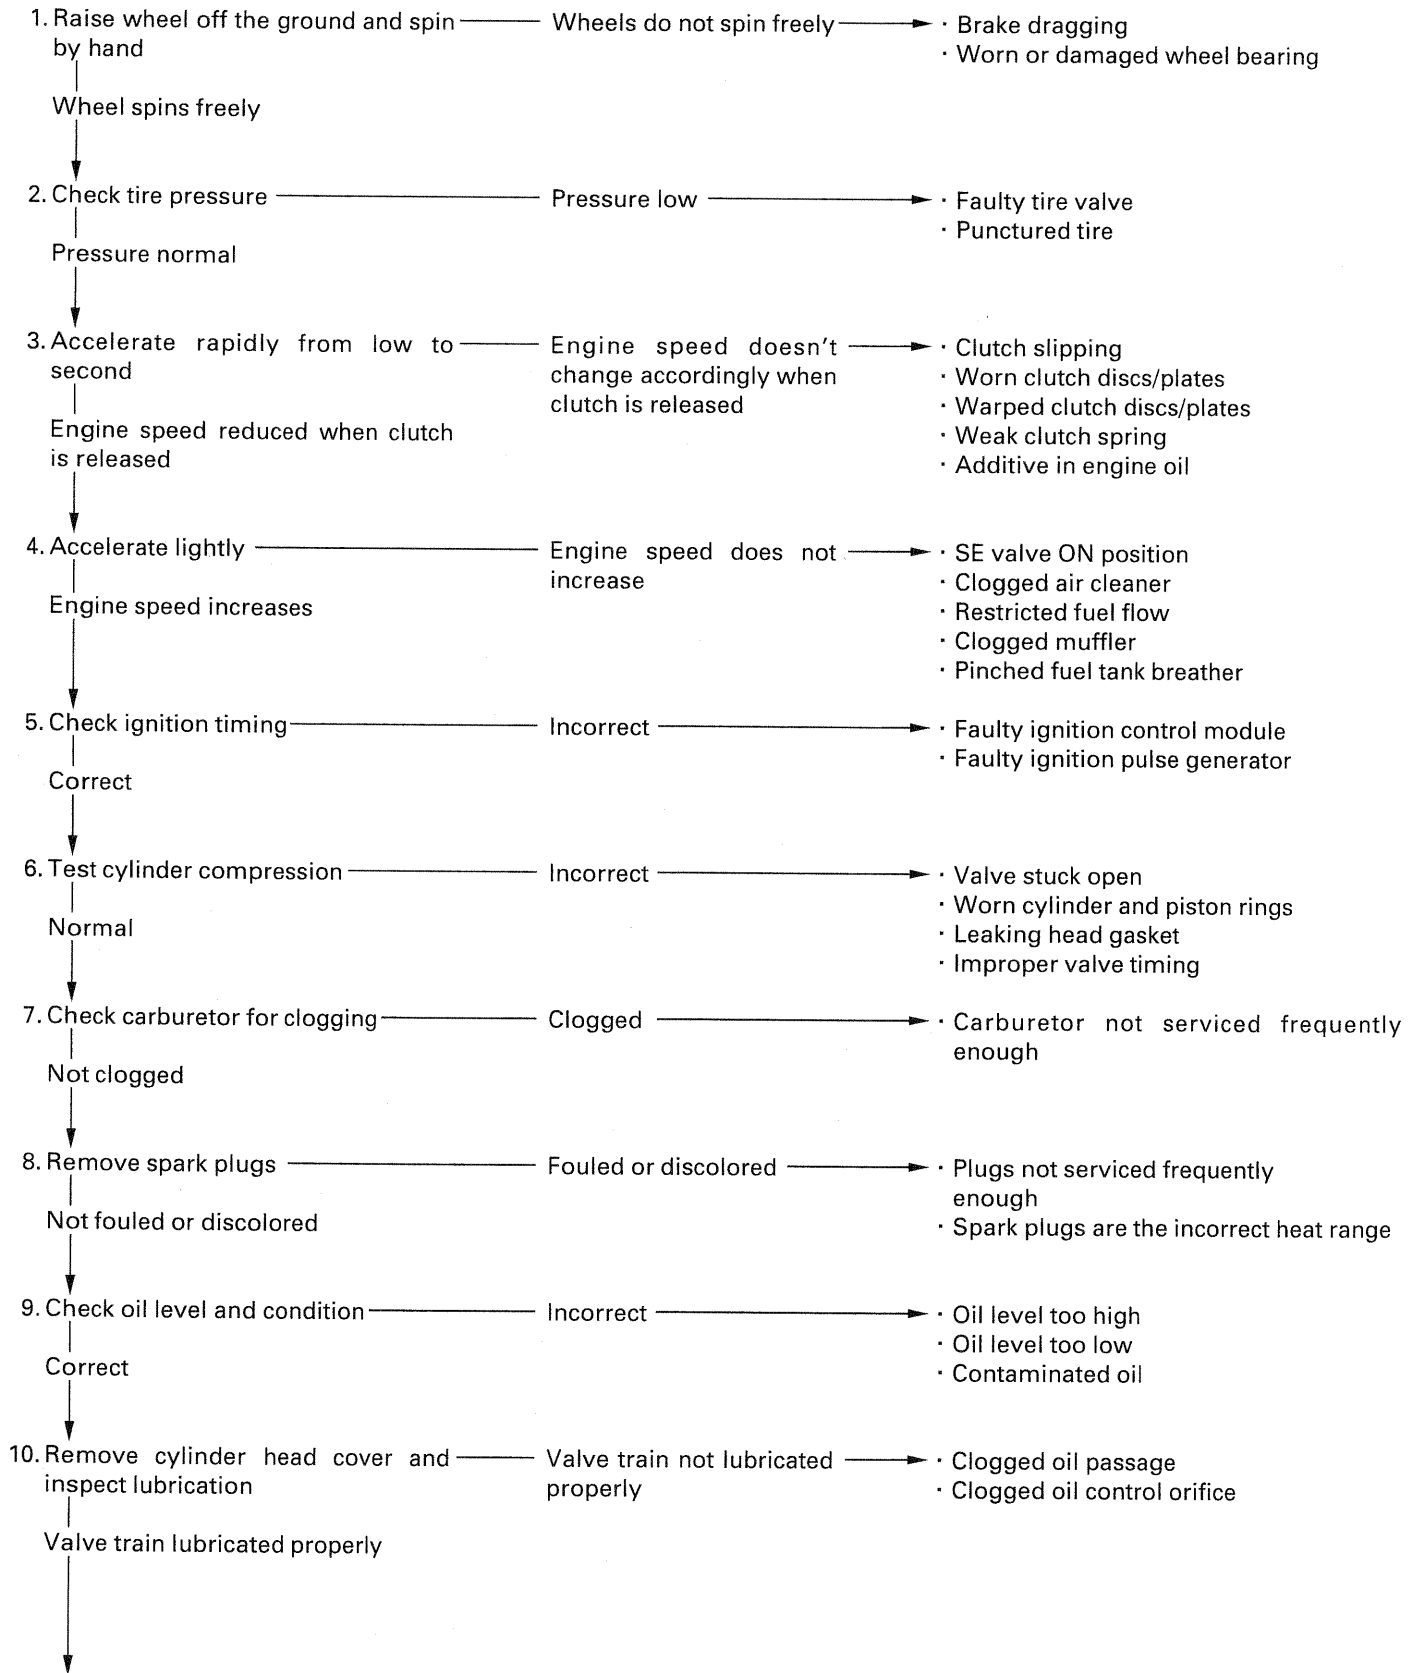

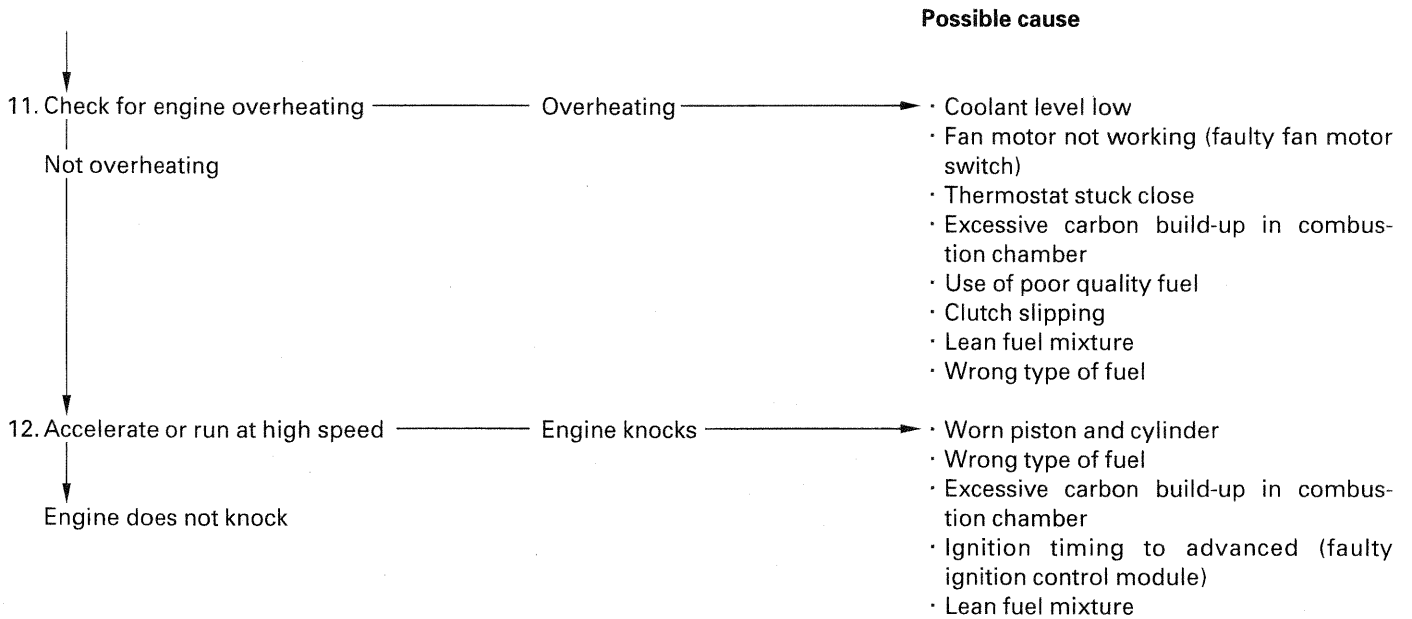


**POOR PERFORMANCE AT LOW AND IDLE SPEED**

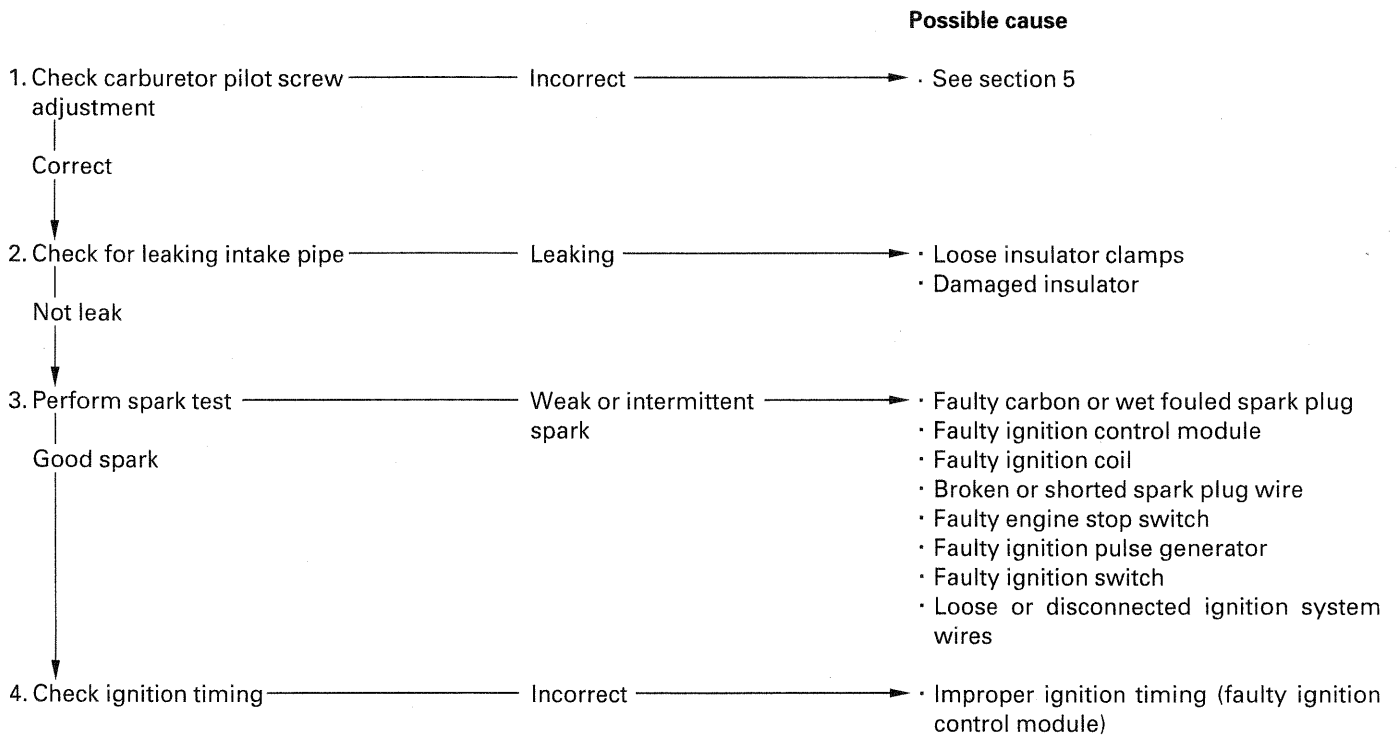

## TROUBLESHOOTING

---

### POOR PERFORMANCE AT HIGH SPEED

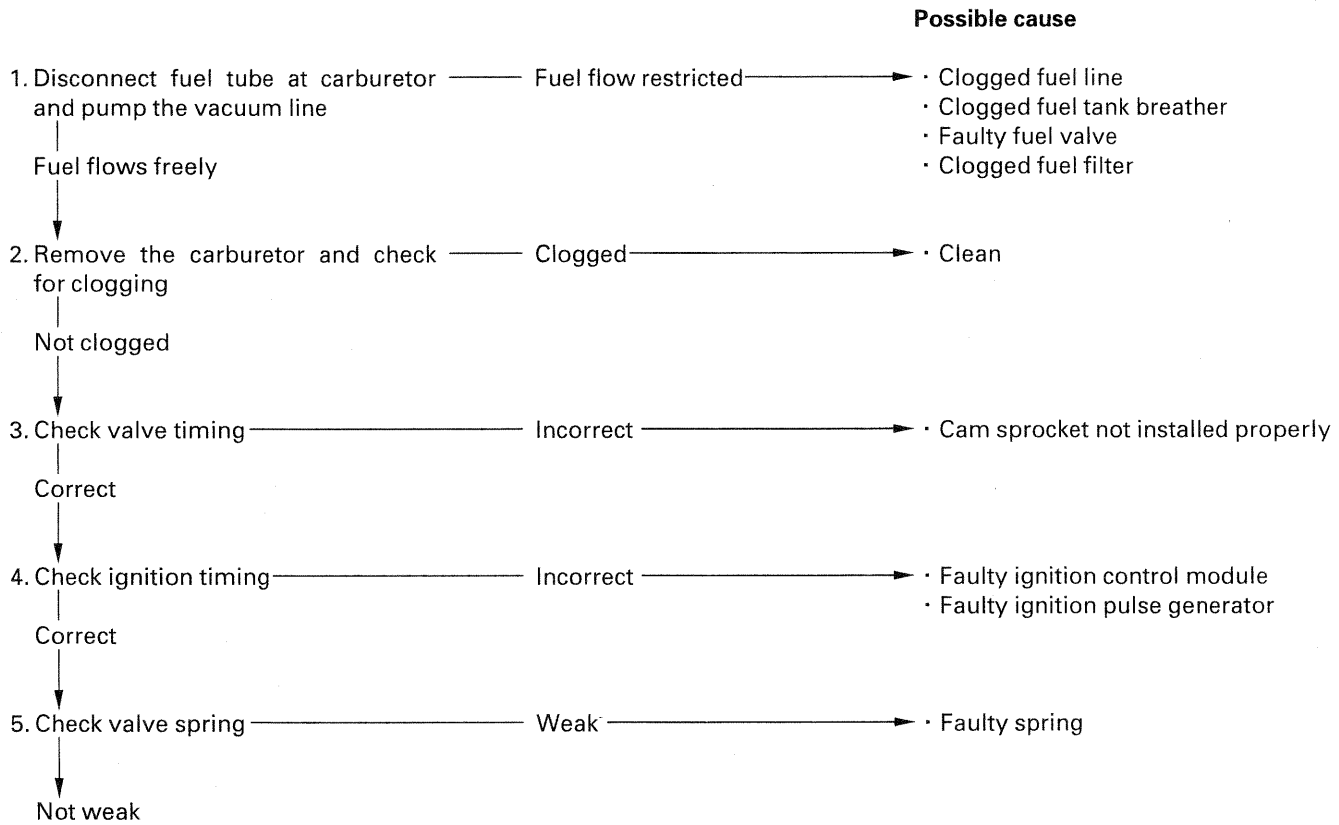

### POOR HANDLING

