

# 22. INDEX

AIR CLEANER	3-8	ENGINE IDLE SPEED	3-18
AIR CLEANER CHAMBER	5-7	ENGINE INSTALLATION	7-9
AIR CLEANER HOUSING	5-4	ENGINE LACKS POWER	21-2
AIR CUT-OFF VALVE	5-22	ENGINE OIL/OIL FILTER	3-14
BATTERY	16-5	ENGINE REMOVAL	7-5
BRAKE CALIPER	15-13	EVAPORATIVE CARBURETOR AIR VENT CONTROL VALVE INSPECTION (CALIFORNIA TYPE ONLY)	5-41
BRAKE FLUID	3-24	EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE ONLY)	3-20
BRAKE FLUID REPLACEMENT/AIR BLEEDING	15-3	EVAPORATIVE EMISSION PURGE CONTROL VALVE INSPECTION (CALIFORNIA TYPE ONLY)	5-39
BRAKE LIGHT SWITCH	3-27	EXHAUST PIPE/MUFFLER	2-14
BRAKE PAD/DISC	15-5	FAN MOTOR SWITCH	19-12
BRAKE PEDAL	14-14	FLOAT CHAMBER	5-17
BRAKE SHOE/PAD WEAR	3-25	FLYWHEEL, STARTER CLUTCH	9-3
BRAKE SYSTEM	3-26	FORK	13-22
BULB REPLACEMENT	19-3	FRONT BRAKE LIGHT SWITCH	19-9
CABLE & HARNESS ROUTING	1-22	FRONT WHEEL	13-13
CAMSHAFT INSTALLATION	10-25	FUEL AUTO VALVE (After '98)	5-35
CAMSHAFT REMOVAL	10-7	FUEL FILTER ('97 - '98)	5-34
CARBURETOR BODY CLEANING	5-23	FUEL LINE	3-4
CARBURETOR CHOKE	3-6	FUEL PUMP ('97 - '98)	5-32
CARBURETOR DISASSEMBLY/ASSEMBLY	5-13	FUEL TANK	2-4
CARBURETOR REASSEMBLY ('97 - '98)	5-24	GEARSHIFT LINKAGE	8-12
CARBURETOR REASSEMBLY (After '98)	5-26	GENERAL SAFETY	1-1
CARBURETOR INSTALLATION ('97 - '98)	5-26	HANDLEBAR	13-4
CARBURETOR INSTALLATION (After '98)	5-27	HANDLEBAR SWITCH	19-10
CARBURETOR REMOVAL ('97 - '98)	5-10	HEADLIGHT AIM	3-28
CARBURETOR REMOVAL (After '98)	5-11	HIGH ALTITUDE ADJUSTMENT (U.S.A. ONLY/'97 - '98)	5-37
CARBURETOR SEPARATION ('97 - '98)	5-12	HIGH ALTITUDE ADJUSTMENT (U.S.A. ONLY/After '98)	5-38
CARBURETOR SYNCHRONIZATION	3-17	HORN	19-14
CHARGING SYSTEM INSPECTION	16-7	IGNITION COIL	17-8
CLUTCH DIODE	18-14	IGNITION CONTROL MODULE (ICM)	17-7
CLUTCH INSTALLATION	8-16	IGNITION SWITCH	19-11
CLUTCH REMOVAL	8-5	IGNITION SYSTEM INSPECTION	17-4
CLUTCH SWITCH	19-10	IGNITION TIMING	17-9
CLUTCH SYSTEM	3-28	LUBRICATION & SEAL POINTS	1-19
COOLANT	6-5	MAINTENANCE SCHEDULE	3-3
COOLANT TEMPERATURE INDICATOR, THERMOSENSOR	19-13	MASTER CYLINDER	15-7
COOLING SYSTEM	3-19	MODEL IDENTIFICATION	1-3
CRANKCASE ASSEMBLY	12-25	NEUTRAL INDICATOR/SWITCH	19-9
CRANKCASE BEARING REPLACEMENT	12-23	NUTS, BOLTS, FASTENERS	3-30
CRANKCASE BREATHER	3-9	OIL PRESSURE CHECK	4-3
CRANKCASE SEPARATION	12-4	OIL PRESSURE INDICATOR/SWITCH INSPECTION	19-8
CRANKCASE STUD BOLT INSPECTION	11-7	OIL PUMP	4-4
CRANKSHAFT/CONNECTING ROD	12-6	PILOT SCREW ADJUSTMENT ('97 - '98)	5-29
CYLINDER COMPRESSION	10-4	PILOT SCREW ADJUSTMENT (After '98)	5-30
CYLINDER HEAD ASSEMBLY	10-21	PISTON INSTALLATION	11-8
CYLINDER HEAD COVER INSTALLATION	10-31	PISTON REMOVAL	11-5
CYLINDER HEAD COVER REMOVAL	10-5	POOR HANDLING	21-4
CYLINDER HEAD DISASSEMBLY	10-14	POOR PERFORMANCE AT HIGH SPEEDS	21-4
CYLINDER HEAD INSTALLATION	10-23	POOR PERFORMANCE AT LOW IDLE SPEEDS	21-3
CYLINDER HEAD REMOVAL	10-13	PRIMARY DRIVE GEAR	8-9
CYLINDER INSTALLATION	11-9	RADIATOR COOLANT	3-19
CYLINDER REMOVAL	11-3	RADIATOR RESERVE TANK	6-18
DRIVE CHAIN	3-20	RADIATOR/COOLING FAN	6-8
DRIVE SPROCKET INSTALLATION	7-14	REAR BRAKE	14-11
DRIVE SPROCKET REMOVAL	7-4		
EMISSION CONTROL INFORMATION LABELS	1-36		
EMISSION CONTROL SYSTEMS	1-31		
ENGINE DOES NOT START OR IS HARD TO START	21-1		

## INDEX

---

REAR BRAKE LIGHT SWITCH	19-10	TROUBLESHOOTING	
REAR FENDER/REAR SUB FRAME	2-8	(ALTERNATOR/STARTER CLUTCH)	9-1
REAR WHEEL	14-3	(BATTERY/CHARGING SYSTEM)	16-3
REGULATOR/RECTIFIER	16-9	(CLUTCH/GEARSHIFT LINKAGE)	8-2
RIGHT CRANKCASE COVER REMOVAL	8-3	(COOLING SYSTEM)	6-3
RIGHT CRANKCASE COVER INSTALLATION	8-20	(CRANKSHAFT/TRANSMISSION)	12-3
SEAT	2-2	(CYLINDER HEAD/VALVES)	10-3
SERVICE INFORMATION		(CYLINDER/PISTON)	11-2
(ALTERNATOR/STARTER CLUTCH)	9-1	(ELECTRIC STARTER)	18-2
(BATTERY/CHARGING SYSTEM)	16-1	(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1
(CLUTCH/GEARSHIFT LINKAGE)	8-1	(FRONT WHEEL/SUSPENSION/STEERING)	13-3
(COOLING SYSTEM)	6-1	(FUEL SYSTEM)	5-3
(CRANKSHAFT/TRANSMISSION)	12-2	(HYDRAULIC BRAKE)	15-2
(CYLINDER HEAD/VALVES)	10-1	(IGNITION SYSTEM)	17-3
(CYLINDER/PISTON)	11-1	(LUBRICATION SYSTEM)	4-2
(ENGINE REMOVAL/INSTALLATION)	7-3	(REAR WHEEL/BRAKE/SUSPENSION)	14-2
(ELECTRIC STARTER)	18-1	TURN SIGNAL RELAY	19-15
(FRAME/BODY PANELS/EXHAUST SYSTEM)	2-1	VACUUM CHAMBER	5-15
(FRONT WHEEL/SUSPENSION/STEERING)	13-1	VALVE CLEARANCE	3-11
(FUEL SYSTEM)	5-2	VALVE GUIDE REPLACEMENT	10-17
(HYDRAULIC BRAKE)	15-1	VALVE SEAT INSPECTION/REFACING	10-19
(IGNITION SYSTEM)	17-1	WATER PUMP	6-15
(LIGHTS/METERS/SWITCHES)	19-1	WHEELS/TIRES	3-30
(LUBRICATION SYSTEM)	4-1		
(MAINTENANCE)	3-1		
(REAR WHEEL/BRAKE/SUSPENSION)	14-1		
SERVICE RULES	1-2		
SHOCK ABSORBER	14-18		
SIDE COVER	2-3		
SIDE STAND	3-29		
SIDE STAND SWITCH	19-15		
SPARK PLUG	3-9		
SPECIFICATIONS	1-5		
SPEEDOMETER	19-6		
STARTER MOTOR	18-4		
STARTER RELAY SWITCH	18-13		
STATOR INSTALLATION	9-9		
STATOR REMOVAL	9-2		
STEERING COVER	2-3		
STEERING HEAD BEARINGS	3-31		
STEERING STEM	13-35		
SUB-AIR CLEANER ELEMENT ('97 - '98)	5-6		
SUSPENSION	3-29		
SWINGARM	14-22		
SYSTEM DIAGRAM			
(BATTERY/CHARGING SYSTEM)	16-0		
(ELECTRIC STARTER)	18-0		
(IGNITION SYSTEM)	17-0		
(LIGHTS/METERS/SWITCHES)	19-0		
SYSTEM FLOW PATTERN	6-0		
SYSTEM TESTING	6-4		
THERMOSTAT	6-7		
THROTTLE OPERATION	3-4		
TOOLS	1-17		
TORQUE VALUES	1-14		
TRANSMISSION	12-14		